SCOSCHE

VO4152B

DOUBLE DIN INSTALLATION KIT FOR 2005-UP VOLVO S60/V70

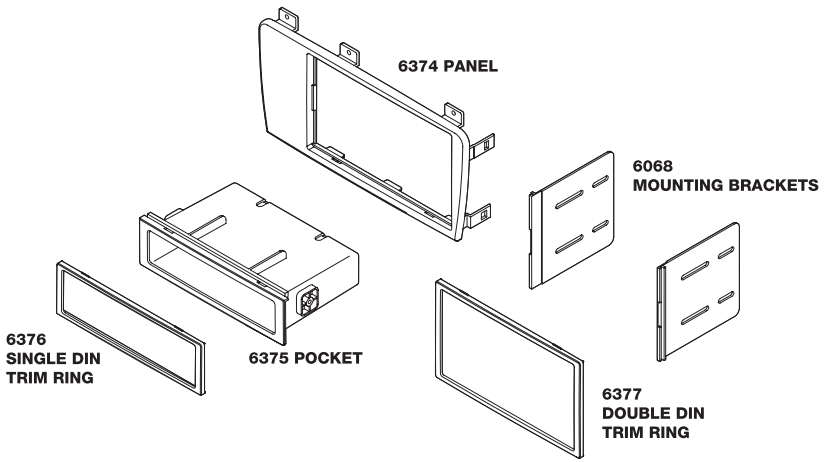

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2005-up Volvo S60/V70 vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:

Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory air bag wiring - air bags can accidently deploy causing serious injury or death.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

STOP
IMPORTANT!
Do Not Return Product
to the Retailer!
IF YOU NEED ASSISTANCE OR REPLACMENT PARTS
Call us FIRST at . . .
1-800-621-3695 ext 3
Toll Free, No-Charge tech support
FRIENDLY CUSTOMER SERVICE TECHNICIANS
YOU WON'T BE ON HOLD LONGER THAN 5 MINUTES
OUR HOURS ARE:
Monday - Friday 8:00 a.m. to 5:30 p.m. (PST)
Saturday 8:00 a.m. to 2:00 p.m. (PST)

©2007 SCOSCHE INDUSTRIES, INC.

SI 9/07 VO4152B (3000003)

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

VO03
2000-UP VOLVO

STEREO REMOVAL

2005-UP VOLVO S60/V70

1. Move the shifter to the rear most position, unsnap the shifter trim and move it to one side.
2. Remove (2) T-25 Torx screws from bottom of the stereo/climate control cluster.
   CAUTION: Do not remove connectors before turning the ignition off.
3. With stereo and climate controls out, remove (4) T-25 Torx screws holding the radio to the bracket, release the clips and remove the stereo.

MOUNTING THE STEREO

ISO MOUNT

1. Slide pocket into kit panel from front until it snaps into place.
2. Slide left and right brackets into their corresponding slots in kit panel.
3. Mount stereo to brackets with stereo supplied screws.
4. Snap trim ring into place.

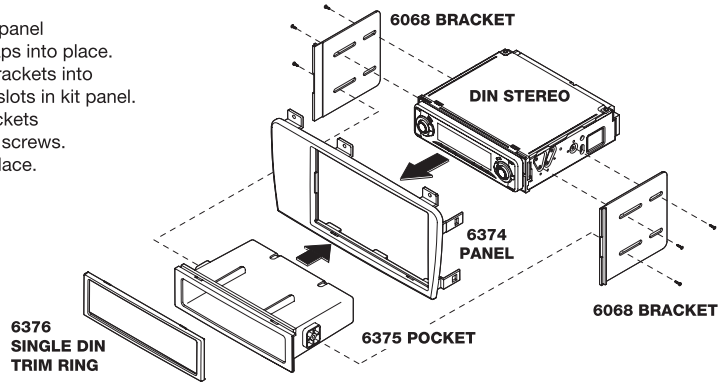

DOUBLE DIN ISO MOUNT

1. Slide left and right double DIN ISO brackets into their corresponding slots in kit panel.
2. Mount stereo to brackets with stereo supplied screws.
3. Snap trim ring into place.

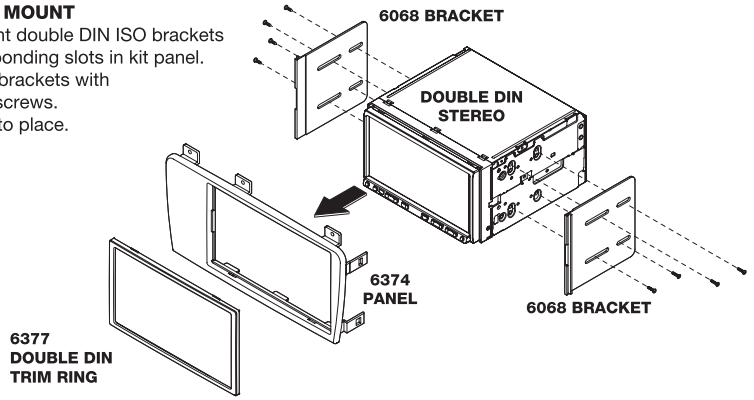

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this VO4152B kit for 2005-Up Volvo S60/V70 vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.